



2855 Marleau Avenue, Suite A, Cornwall, Ontario K6H 7B6
 Tel: 613 938-2900 Fax: 613 938-8219
 www.cie-eic.com

Control Point Programming for Pre-wet/Anti-ice with three boom operation.

1 - Go to Liquid Application Rate F4 and enable liquid 1 and 2. Choose 1 or 2 on keyboard to enter liquid 1 or liquid 2. Enable is the first option at top of the display. Press Y for yes to enable.

2 - At the bottom of menu, change the label on liquid 1 to Prewet & 2 to Anti-ice. Simply type it in & hit enter key.

3 - Go to F5 Liquid Configuration. Menu should read: 1 Pre-wet enabled, 2 Anti-ice enabled, 3 Liquid disabled, 4 Liquid disabled, and 5 Boom. Choose menu option 5 for Boom and setup booms as on the chart below.

1 section 1	Section	enabled	Yes	
	12v on		yes	
	Num of	nozzles	1	
	nozzle	spacing	120	
2 section 2	Section	enabled	yes	
same as 1				
3 section 3	Section	enabled	yes	
same as 1				
4 section 4	Section	enabled	NO	
5 section 4	12 v	on	Yes	
	Boom	input	No	

4 - Go to F1 Operate. (Pre-wet, to Anti-ice switch will work.)