

Dj FLEX4 PRO BASIC OPERATIONS

- To operate spreader, press the AUTO ON/OFF switch at the top of the switch module and spreader will turn on when there is ground speed.
- To Blast, press the BLAST button on switch module.
- The PAUSE button allows operator to pause spreading and then resume at same rate by pressing PAUSE again.
- To change rate press the round button in center of dial on switch module. The first channel at top of FLEX4 screen will now have a YELLOW border indicating channel is selected. Press the RATE – or RATE + switches on bottom of switch module to change rate for that channel.
- Increase or decrease SPINNER speeds by turning dial on switch module.
- To UNLOAD, the truck must be stationary. Press the button on the console beside the word UNLOAD. On the next screen press the button next to the material you would like to unload and then press the button beside START. When you are finished, press the button beside STOP and then press BACK to return to main operating screen.
- Camera will come on whenever truck is placed in REVERSE if you have the 12V reverse relay. Otherwise, you can press the Camera ON button on the right hand side to view camera picture.



Champion Industrial Equipment 613-938-2900