

**Status Information**

- GNSS Status
- Straight AB and Azimuth Guidance
- Dynamic AB Guidance
- Circle Pivot Guidance
- Outside / Inside Arable Land Area
- Assisted/Auto Steering Status
- Automatic Section Control
- Application Mapping

**Main Menu button**  
access wizards, console options, mapping & guidance specifications and GNSS settings

**Slide-Out Tray button**  
access options for Feature Bar selection

**Information & Status Bar**



23/06/2021 11:28

On Screen Guidance Bar



**Navigation Activity (center) & Selectable Job Information**

6.5 mph

5.3 ac

Mark Point A  
0.00

23.0 deg

0 No.

**Action Bar**  
options for Guidance or Boundary selection

 
**Guidance Mode**

- No Guidance
- Straight AB Guidance
- Dynamic AB Guidance
- Circle Pivot Guidance
- Azimuth Guidance

**Boundary Mode**

- Exterior
- Interior

**Interactive Map**  
pinch / push to zoom



**Mini-map**  
with quick access between Vehicle View and Field View

**TwinView**

display both guidance and UT information



**Feature Bar**

**Vehicle Touch Application Mapping**  
touch vehicle to start / stop mapping

- Guidance Mode
- Boundary Mode
- Display Quick Adjust
- Mapping Layers
- Universal Terminal
- Close Job

**WELCOME**

Once the power up sequence has completed, the Welcome screen will appear with the options to select a different language, switch console units and change the local time zone.

Press OK to advance to the Vehicle Wizard.

On the Settings Menu, select the "Device" menu to establish an Application Mapping device.

**ESTABLISH AN AB GUIDELINE**

Select Guidance Mode on Feature Bar.

From Slide-Out Tray, select a guidance mode.

At start location, press Start Guideline on the Action Bar.

At end location, press Finish Guideline on the Action Bar.

Enter new unique guideline name.

**SWITCH GUIDELINE**

Select Guidance Mode on Feature Bar.

From Slide-Out Tray, select Switch Guideline.

Select from the listed guidelines.

**Guidance Mode**

- Start Guideline
- Finish Guideline
- Cancel Guideline
- Dynamic AB Detour
- Start Azimuth
- Adjust Guideline
- Nudge Guideline

**Boundary Mode**

- Start Exterior
- Finish Exterior
- Start Interior
- Finish Interior



Power Button

**TeeJet**  
Technologies

**MATRIX 908**

Take note of your Serial Number  
found on this label

It is required for Product Registration.

**PRODUCT REGISTRATION**



Camera Connector

Harness Connector

Ethernet Connector

Speaker

RAM Mount Connector

USB Connector

WiFi Antenna Connector

**GENERAL DISTANCES**

Have these distances on-hand to set up a vehicle and device.

**Vehicle**

- ▶ In-Line Distance from the Vehicle Pivot Point to the Hitch Point
- ▶ Lateral Distance from the Vehicle Centerline to the Hitch Point
- ▶ In-Line Distance from the Vehicle Pivot Point to the Antenna
- ▶ Lateral Distance from the Vehicle Centerline to the Antenna

**Sprayer Application Mapping**

- ▶ In-Line Distance from Hitch/Connection to Trailer Axle
- ▶ In-Line Distance from Hitch/Connection to Product Delivery Point
- ▶ Lateral Distance from the Centerline of the Vehicle to the Center of the Boom
- ▶ In-Line Distance from Vehicle Pivot Point to Section 1

**Spreader Application Mapping**

- ▶ In-Line Distance from Hitch/Connection to Trailer Axle
- ▶ In-Line Distance from Hitch/Connection to Disc
- ▶ In-Line Distance from Disc to Leading Edge of Section 1

**GNSS Antenna Connector**

to setup GNSS options:

Select Main Menu button  on Information & Status Bar.

On the Settings Menu, select "GNSS Receiver".

**USER GUIDE**  
accessible under  
Field Computer options

